

Instellen Antwoordapparaat

Zorg ervoor dat uw box in expertmode staat:

1. Ga naar settings
2. Ga naar System
3. Ga naar Expert Mode
4. Aktiveer "Show expert settings"
5. Klik op "Apply"

Expert Mode

Show expert settings

The expert settings make advanced settings accessible that are not required for normal operation. The individual settings are appended to the display of the relevant menu commands. These settings require extensive knowledge of networks.

Fixed-line network enabled

The fixed-line network can be disabled if the FRITZ!Box is connected only to the DSL line and not to the fixed-line network. Then all telephone calls will be conducted via the Internet. In this case the Internet telephony provider must forward all calls.

Antwoord apparaat instellen :

1. Ga in uw browser naar <http://192.168.178.1> of <http://fritz.box>
2. Ga dan naar Settings
3. Vervolgens klik je op het tablad "Telephony"
4. Daar vind u het kopje "Answering Machine"
5. Vervolgens klikt u op "Enable Answering machine"
6. Bij "Select Numbers for the Answering Machine" selecteerd u het telefoonnummer of de telefoonnummers waarop de automatische beantwoorder geactiveerd moet worden.
(U kunt maximaal 10 nummers invoeren bij "Select numbers for the answering machine")

Start Menu
Settings

- Wizards
- ▾ Advanced Settings
 - Internet
 - ▾ Telephony
 - ▾ Calls
 - ▾ Telephone Book
 - ▾ wake-up call
 - ▾ Call Diversion
 - ▾ **Answering Machine**
 - ▾ Telephony Devices
 - ▾ Internet Telephony
 - ▾ Dialing Rules
 - ▾ Regional Options
 - USB Devices
 - WLAN
 - DECT
 - System
 - Programs

Answering Machine

Use the tabs to select among the different answering machines.

Answering Machine 1 More...

To check the answering machine on location, dial **600.

Select Numbers for the Answering Machine

1.

2.

Settings Options for the Answering Machine

Enable answering machine

Operating mode:

Greeting delay:

Recording length:

If you would like to check your answering machine from another telephone line, you will need to define a PIN. The PIN must consist of exactly four numerals.

PIN:

PIN confirmation:

Send messages via e-mail
Configure the FRITZ!Box [Push Service](#) first if you would like to use this function.

Recorded calls will be saved on the USB mass storage device

Delete Answering Machine
Apply
Cancel
Help

7. Nu gaan we kijken bij de Operate Mode, wilt u dat degene die u belt geen bericht achter kan laten kies dan voor de optie " Greeting only " wilt u juist wel dat ze een bericht in kunnen spreken selecteer dan " Record Messages " .
8. Bij Greeting Delay kunt u aangeven hoeveel seconden de telefoon over mag gaan voordat het antwoordapparaat het gesprek aanneemt.
9. Bij Recording Lenght kunt u de maximale lengte van een door de beller ingesproken bericht instellen
10. Bij PIN kunt u een persoonlijke PINCODE ingeven waarmee u via een externe telefoon kunt inbellen op uw FRITZ!Box om zo als u niet thuis bent toch nog de berichten op uw voicemail te beluisteren.
11. Vervolgens de push service, wilt u een mail ontvangen als iemand iets inspreekt op uw beantwoorder vink dan deze functie aan zodat u een email ontvangt zodra er een nieuw bericht op uw beantwoorder staat.
(Wanneer u Push Service nog niet geactiveerd heeft ga dan verder bij stap 12. Als u Pushservice wel geactiveerd heeft ga dan verder bij stap 14.)
12. Voordat u dat doet gaat u eerst naar het tabblad erlangs " Advanched settings " daar geeft u de naam van u SMTP server op vervolgens gaat u terug naar het vorige tabblad en stelt u daar de rest van uw gegevens in.

13. Heeft u dit allemaal gedaan, klikt u dan op apply

The screenshot shows the FRITZ!Box web interface. At the top, there is a blue header with the FRITZ! logo and the text "FRITZ!Box". Below the header, there are two tabs: "Start Menu" and "Settings". The "Settings" tab is active. On the left side, there is a navigation menu with various categories like "Wizards", "Advanced Settings", "Internet", "Telephony", "USB Devices", "WLAN", "DECT", "System", "Event Log", "Energy Monitor", "INFO Display", "Night Service", "FRITZ!Box Password", "Save Settings", "Firmware Update", "Reset", "Network", "Expert Mode", "Time Zone", "Language Settings", and "Programs". The main content area is titled "Push Service" and has two sub-tabs: "Settings" and "Advanced Settings". The "Advanced Settings" tab is active. The page contains several sections: "Select what information should be contained in the Push Service mail" with four checked checkboxes: "Call List", "Statistics on Child Protection", "Statistics on Online Time", and "Event Log". Below this is a section "Send connection and use information to the following e-mail address:" with a text input field for "e-mail address of recipient" containing "fritzbox@fritzbox.nl". The next section is "Push Service Return Address Information" with fields for "Name of sender" (FRITZ!Box), "Name of SMTP server" (FRITZ), and "E-mail user name" (AVMFRITZ). There is a checked checkbox "This server supports a secure connection". A note states: "FRITZ!Box requires information about your mail account to send e-mail messages. The information required corresponds to the settings of your e-mail program. Contact your e-mail provider for more information." At the bottom, there is a "Test Push Service" button and three buttons: "Apply", "Cancel", and "Help".

The screenshot shows the FRITZ!Box web interface. At the top, there is a blue header with the FRITZ! logo and the text "FRITZ!Box". Below the header, there are two tabs: "Start Menu" and "Settings". The "Settings" tab is active. On the left side, there is a navigation menu with various categories like "Wizards", "Advanced Settings", "Internet", "Telephony", "USB Devices", "WLAN", "DECT", "System", "Event Log", "Energy Monitor", "INFO Display", "Night Service", "FRITZ!Box Password", "Save Settings", "Firmware Update", "Reset", "Network", "Expert Mode", "Time Zone", "Language Settings", and "Programs". The main content area is titled "Push Service" and has two sub-tabs: "Settings" and "Advanced Settings". The "Settings" tab is active. The page contains several sections: "Here you can define that the FRITZ!Box send you a regular e-mail message (Push Service mail) with your connection and usage data." Below this is a note: "FRITZ!Box does not have an internal clock. This means that FRITZ!Box Push Service is not ready for operation. FRITZ!Box must connect to the Internet at least once before it is able to tell the valid time." There is a checked checkbox "Enable FRITZ!Box Push Service". Below this is a section "Select how often the Push Service mail should be sent:" with three radio buttons: "daily" (selected), "weekly", and "monthly". The next section is "E-mail return address" with a text input field containing "fritzbox@fritzbox.nl", a "Password" field with masked characters, and a "Confirm password" field with masked characters. At the bottom, there is a "Test Push Service" button and three buttons: "Apply", "Cancel", and "Help".

14. Nu gaat u weer terug naar het kopje “ Answering Machine “ en ziet u een balkje waar u kunt aanvinken of u mails wilt ontvangen als u een inkomend bericht krijgt, vink deze indien gewenst aan.

The screenshot shows the Fritz!Box web interface. The header features the 'FRITZ!Box' logo. A navigation menu on the left lists various settings, with 'Answering Machine' selected. The main content area is titled 'Answering Machine' and contains the following elements:

- Instructions: "Use the tabs to select among the different answering machines."
- Tab: "Answering Machine 1" (with a "More..." link).
- Text: "To check the answering machine on location, dial **600."
- Section: "Select Numbers for the Answering Machine" with two dropdown menus. The first dropdown is set to "0201234567".
- Section: "Settings Options for the Answering Machine" with a checked checkbox "Enable answering machine".
- Options: "Operating mode" (Record messages), "Greeting delay" (20 seconds), and "Recording length" (60 seconds).
- Text: "If you would like to check your answering machine from another telephone line, you will need to define a PIN. The PIN must consist of exactly four numerals."
- Fields: "PIN" and "PIN confirmation" (both masked with dots).
- Section: "Send messages via e-mail" with a checked checkbox and a text input field containing "fritzbox@fritzbox.nl".
- Option: "Recorded calls will be saved on the USB mass storage device" (unchecked).
- Buttons: "Delete Answering Machine", "Apply", "Cancel", and "Help".

15. Wilt u bijvoorbeeld nog een antwoord apparaat toevoegen dan kunt u klikken op het tabblad “ More “ en dan moet u deze zelfde stappen ondernemen voor het instellen van uw andere antwoordt apparaten. Er kunnen maximaal 5 antwoord apparaten op geactiveerd worden!
16. Uw antwoordt apparaat is nu ingesteld!